

Headlights

► U.S.A




- 1 **DRILL OFF** Turn off the daytime running light system.
- 2 **AUTO** The headlights and parking lights turn on/off automatically in accordance with ambient light levels.
- 3 **☞ ☞** The instrument panel, side marker, parking, tail and license plate lights turn on.
- 4 **☞ ☞** The headlights and all lights listed above turn on.

► Canada



- 1 **○** Off
- 2 **AUTO** The headlights and parking lights turn on/off automatically in accordance with ambient light levels.
- 3 **☞ ☞** The instrument panel, side marker, parking, tail and license plate lights turn on.
- 4 **☞ ☞** The headlights and all lights listed above turn on.

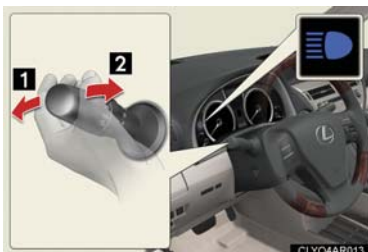

- 1 To engage the high beams, push the lever forward.
- 2 To flash the high beams temporarily, pull the lever toward you.

n AFS (Adaptive Front-lighting System) on and off (if equipped)

AFS improves visibility at intersections and on curves by automatically adjusting the direction of light axis of the headlights according to vehicle speed and the degree of the tire angle that are controlled by steering input.



- 1 Press the menu switch.
- 2 Press the "ENTER" switch upwards or downwards until "AFS" appears.



- 3 Press the "ENTER" switch to select on/off.

Press the menu switch to change to the normal display.




Windshield Wipers and Washer

Intermittent wiper with interval adjuster (if equipped)



- | | | |
|---|--|------------------------|
| 1 | | Off |
| 2 | | Intermittent operation |
| 3 | | Low speed |
| 4 | | High speed |
| 5 | | Single wipe |

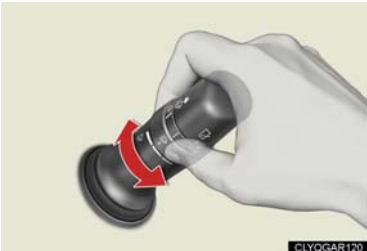

Intermittent operation: Wiper interval can be adjusted by turning the band.



To spray washer fluid, pull the lever. The wipers will operate automatically.

n Rain-sensing windshield wipers (if equipped)



- | | | |
|---|--|---------------------|
| 1 | | Off |
| 2 | | Automatic operation |
| 3 | | Low speed |
| 4 | | High speed |
| 5 | | Single wipe |



Sensitivity can be adjusted by turning the band.




To spray washer fluid, pull the lever. The wipers will operate automatically.

Automatic High Beam (If Equipped)

The Automatic High Beam uses an in-vehicle camera sensor to assess the brightness of streetlights, the lights of oncoming and preceding vehicles, etc., and automatically turns high beam on or off as necessary.



1 Headlight switch in "AUTO" position.

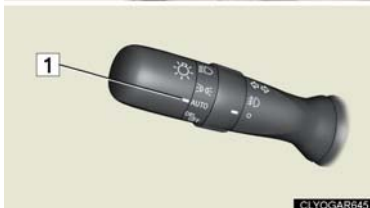

2 Push the lever away from you.

When all of the following conditions are fulfilled, high beam will be automatically turned on (after approximately 1 second):

- Vehicle speed is above approximately 20 mph (32 km/h).

- The area ahead of the vehicle is dark.

- There are no oncoming or preceding vehicles with headlights or tail lights turned on.

Rear Window and Outside Rear View Mirror Defoggers

► Without navigation system



To defog the rear window and the outside rear view mirrors, press the button.

Press again to cancel.

► With navigation system



The system turns off automatically after 15 to 60 minutes.

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Rear Window Wiper and Washer



- 1 Off
- 2 Intermittent window wiper operation
- 3 Normal window wiper operation
- 4 Washer/wiper dual operation
- 5 Washer/wiper dual operation